

ALL-IN WIRELESS CABINET




This Cabinet is suitable for containing HOBBIES THREE WIRELESS SET particulars of which may be had on application.

FRETWOOD AND FITTINGS.
FRETWOOD.—For this design we supply a selected parcel of Oak, with a Set of 4 Square Turned Oak Legs, and a pair of ready made Oak Doors, sufficient No. 24 Oak Moulding, 27/6 Rail Carriage forward.
FITTINGS.—A pair of Drop Handles, No. 5394, a pair of Hinges No. 5379, also 1 pair 1 1/2 in. and 2 pairs 1 in. Brass Hinges, with Erinoid Knob 5376, and sufficient Gold Gauze, 4/3 Post free 4/6.
A complete parcel of Wood, Legs, Moulding and Fittings will be sent for 34/- Carriage Paid.
The British Made Ormond Loud Speaker is also supplied. Chassis 7/6. Unit 12/6. Post Free 21/-. Price of Hobbies Wireless Set suitable for this Cabinet may be had upon application.
Canadian prices may be had from Hobbies Limited, 844, Yonge Street, TORONTO.
The above prices are subject to revision without notice.



Run the screws into the back rail as shown.

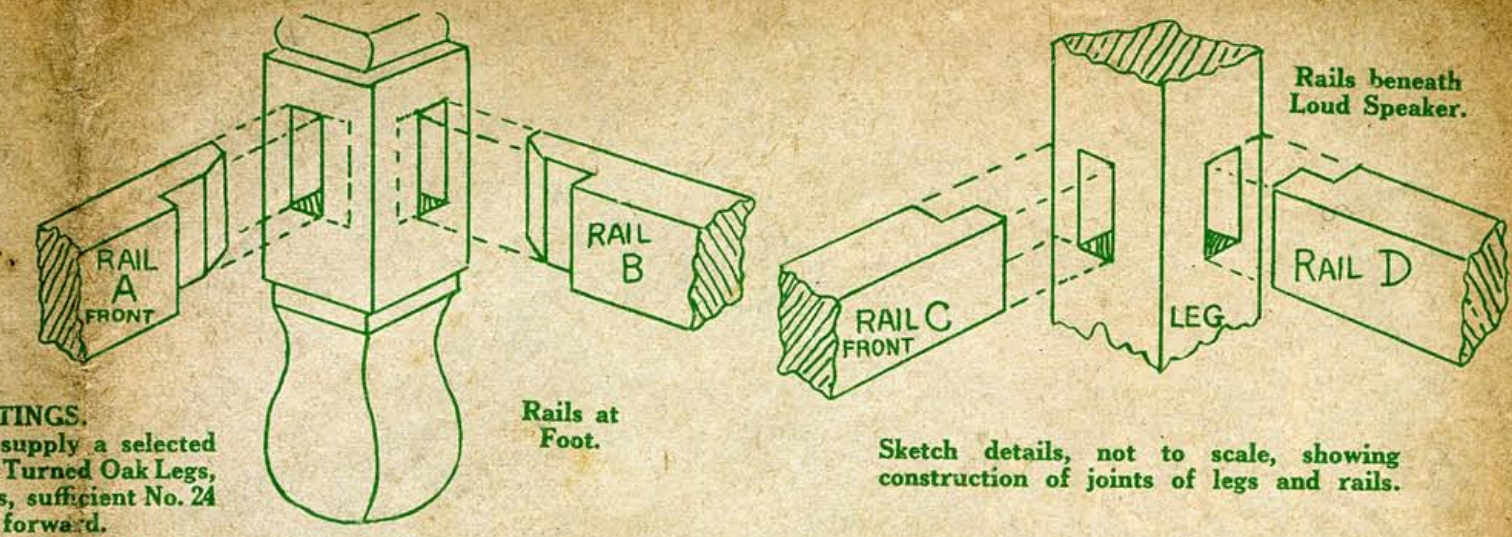


Rails at Foot.

Sketch details, not to scale, showing construction of joints of legs and rails.

The ————— indicates the direction of grain of wood.




SIDES OF CABINET.
Cut two 3/16 in. Three-ply Oak-faced.

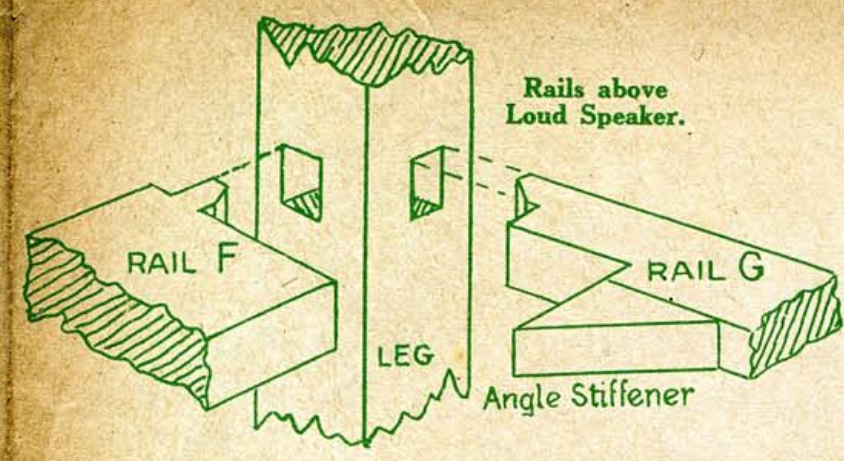


Rails above Loud Speaker.

Angle Stiffener

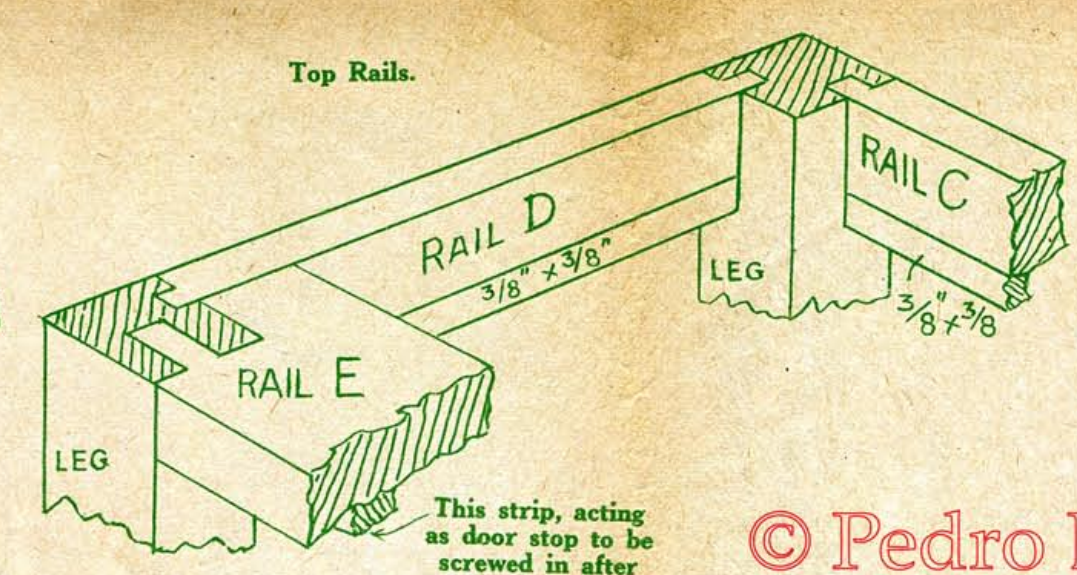

Top Rails.


This strip, acting as door stop to be screwed in after set has been fixed.

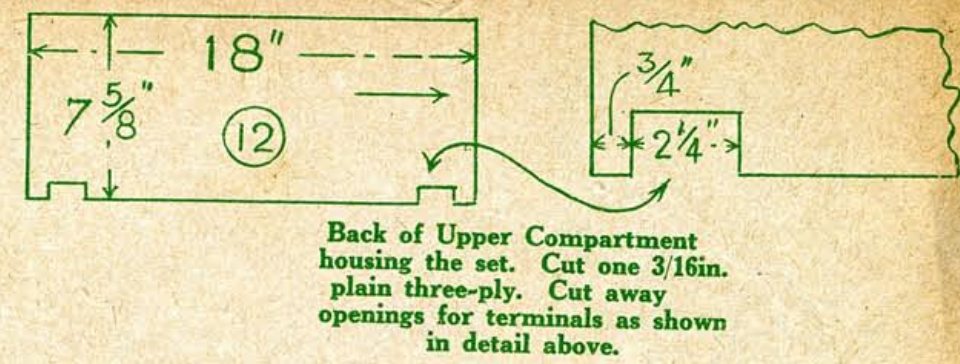


Back of Upper Compartment housing the set. Cut one 3/16 in. plain three-ply. Cut away openings for terminals as shown in detail above.

ADDRESSES.
All orders by post should be addressed—HOBBIES LIMITED, Dereham, Norfolk. Customers residing in the neighbourhood may obtain Tools, Wood and Fittings by calling at the Hobbies Supply Stores—
LONDON: 65 New Oxford Street, W.C. BIRMINGHAM: 94 High Street.
" 147 Bishopsgate, E.C. LEE: 10 Queen Victoria Street, Brigate.
" 83 Newington Butts, S.E.11. SOUTHAMPTON: 25 Bernard Street.
GLASGOW: 326 Argyle Street. BRIGHTON: 68 London Road.
MANCHESTER: 10a Piccadilly. SHEFFIELD: 214 West Street.
TORONTO, CANADA: 844 Yonge Street.
And of all Hobbies Authorized Agents.

© Pedro López Rodríguez 2006
www.finescrollsaw.com

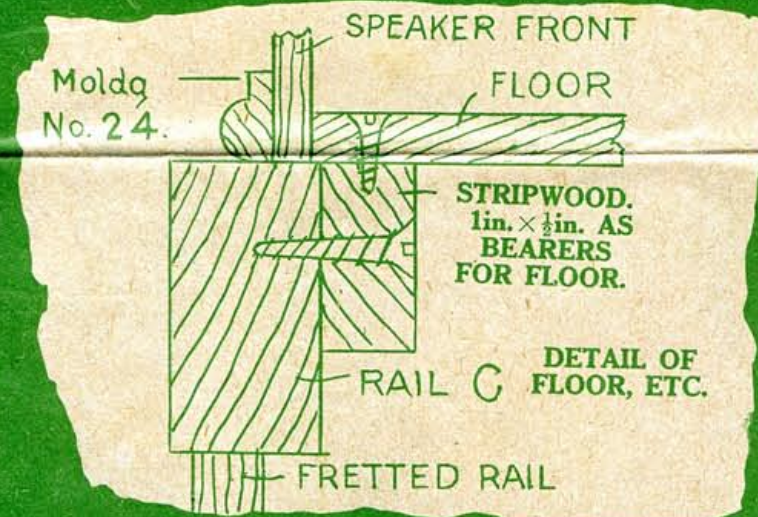

DETAIL OF FLOOR, ETC.

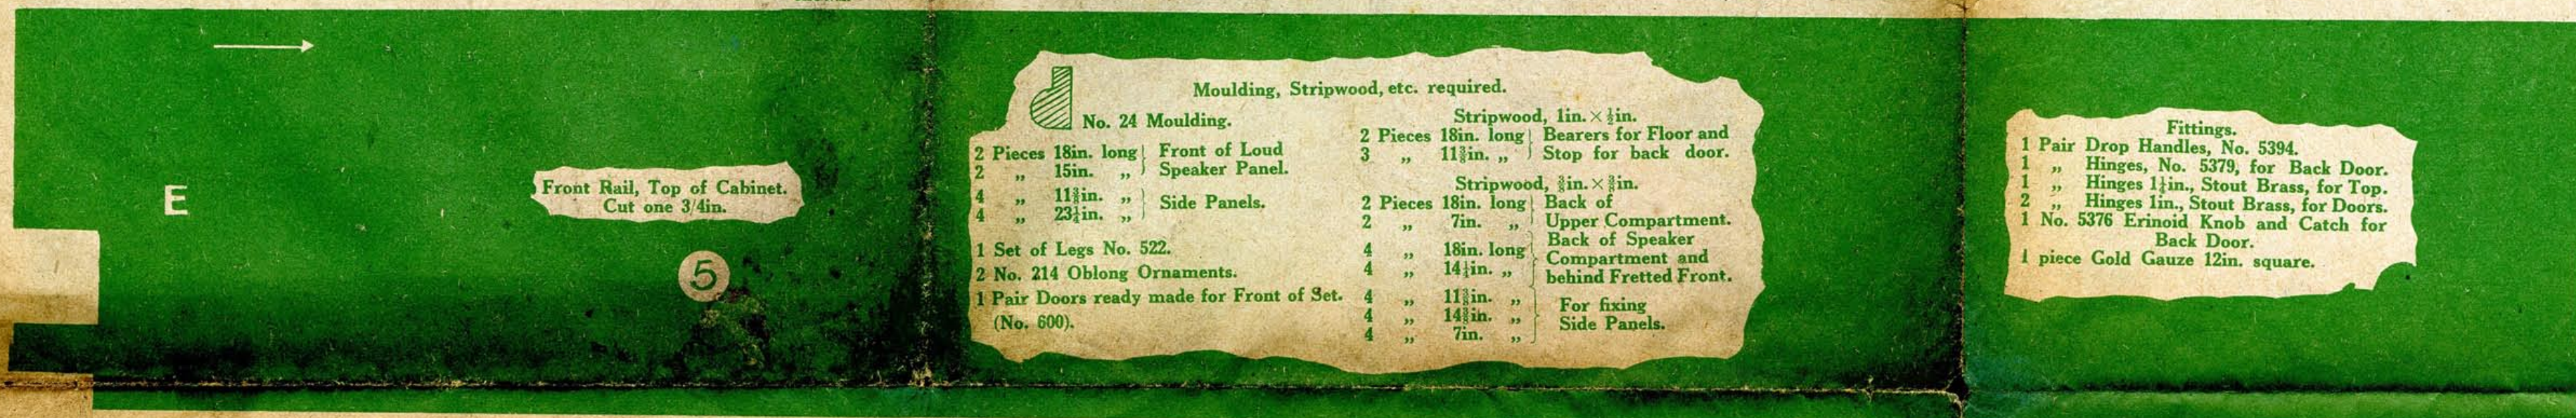


Front Rail, Top of Cabinet.
Cut one 3/4 in.


Moulding, Stripwood, etc. required.

No. 24 Moulding.	Stripwood, 1 in. x 1/2 in.
2 Pieces 18 in. long	18 in. long
2 " 15 in. "	11 1/2 in. "
4 " 11 1/2 in. "	7 in. "
4 " 23 in. "	18 in. long
1 Set of Legs No. 522.	2 " 7 in. "
2 No. 214 Oblong Ornaments.	4 " 18 in. long
1 Pair Doors ready made for Front of Set. (No. 600).	4 " 14 in. "
	4 " 11 1/2 in. "
	4 " 14 1/2 in. "
	4 " 7 in. "


Fittings.
1 Pair Drop Handles, No. 5394.
1 " Hinges, No. 5379, for Back Door.
1 " Hinges 1 1/2 in. Stout Brass, for Top.
2 " Hinges 1 in. Stout Brass, for Doors.
1 No. 5376 Erinoid Knob and Catch for Back Door.
1 piece Gold Gauze 12 in. square.

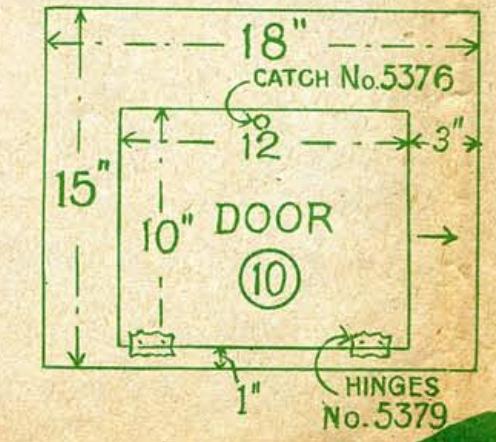

Back to Loud Speaker Compartment.
Cut one ordinary 3/16 in. three-ply. Set out the position for the door as shown and cut round. Fit hinges and catch and piece of strip at back.

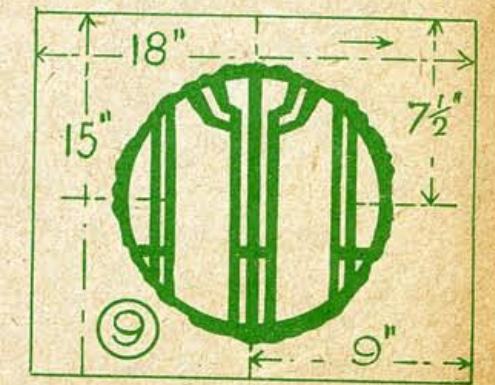


Fretted Front to Loud Speaker Compartment.
Cut one 3/16 in. Three-ply Oak-faced. Set out the centre lines as shown above, and article down the pattern for the fretted front to the dotted lines.

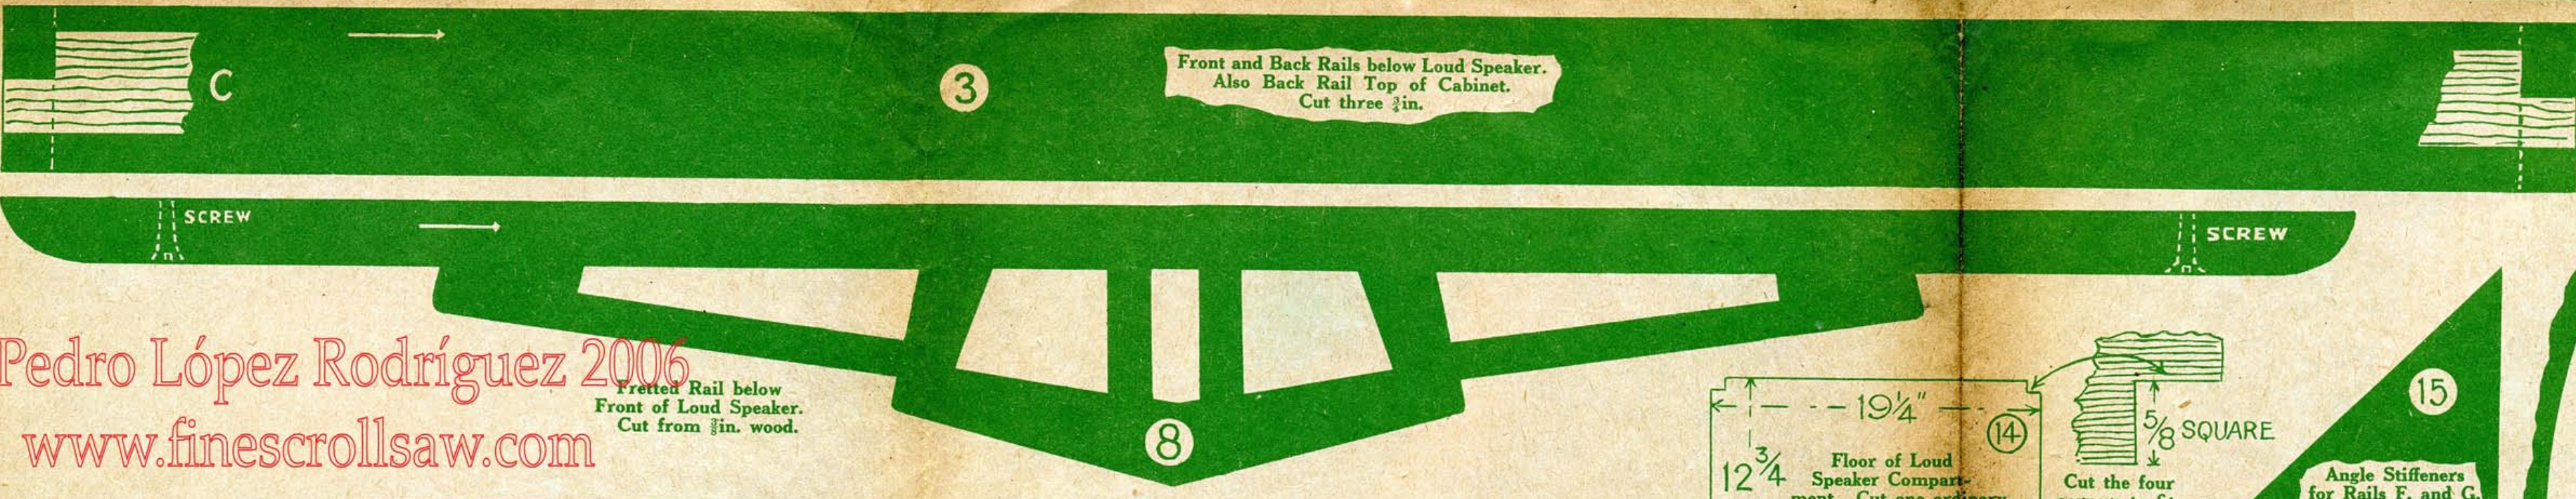

Front and Back Rails below Loud Speaker.
Also Back Rail Top of Cabinet.
Cut three 3/4 in.



Floor of Loud Speaker Compartment. Cut one ordinary 3/16 in. three-ply. Cut the corners as shown in detail on right.

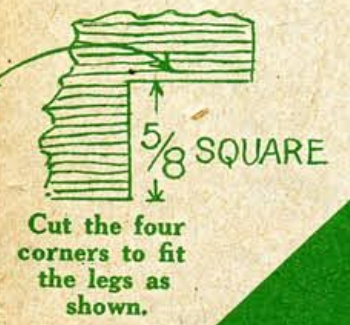

Angle Stiffeners for Rails F and G.
Cut four 3/4 in.



Side Rails above Loud Speaker.
Cut two 3/4 in.




Side Rails below Loud Speaker.
Also Side Rails Top of Cabinet.
Cut four 3/4 in.



Rails connecting Bottoms of Legs (Sides).
Cut two 3/4 in. thick.
Form tenons at each end as shown.




Rails connecting Bottoms of Legs, Front and Back. Cut two 3/4 in. thick.
Form tenons at each end as shown.

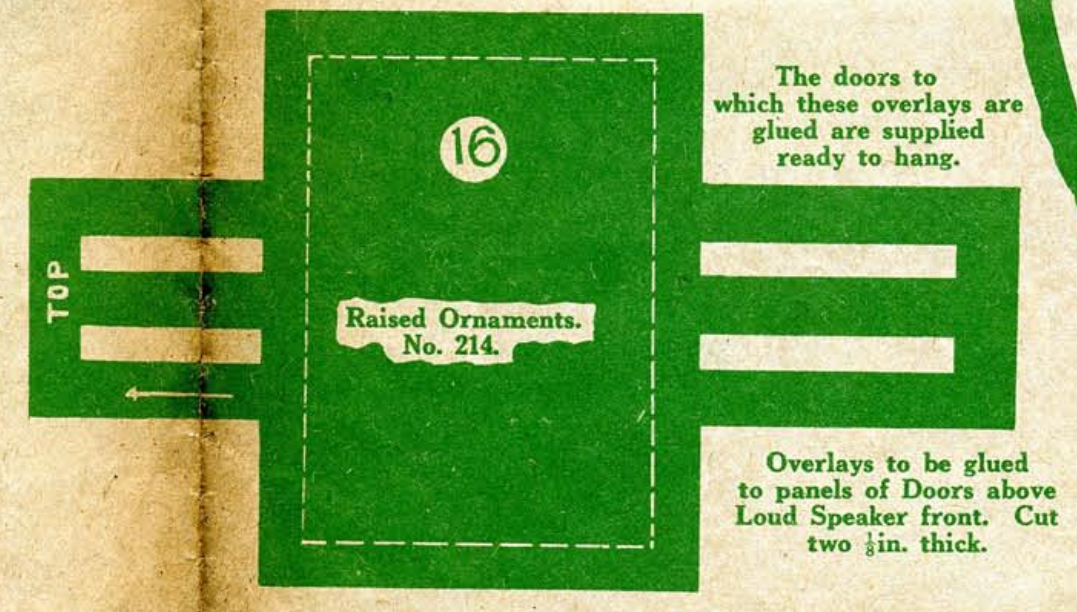

Raised Ornaments.
No. 214.

The doors to which these overlays are glued are supplied ready to hang.

Overlays to be glued to panels of Doors above Loud Speaker front. Cut two 3/4 in. thick.

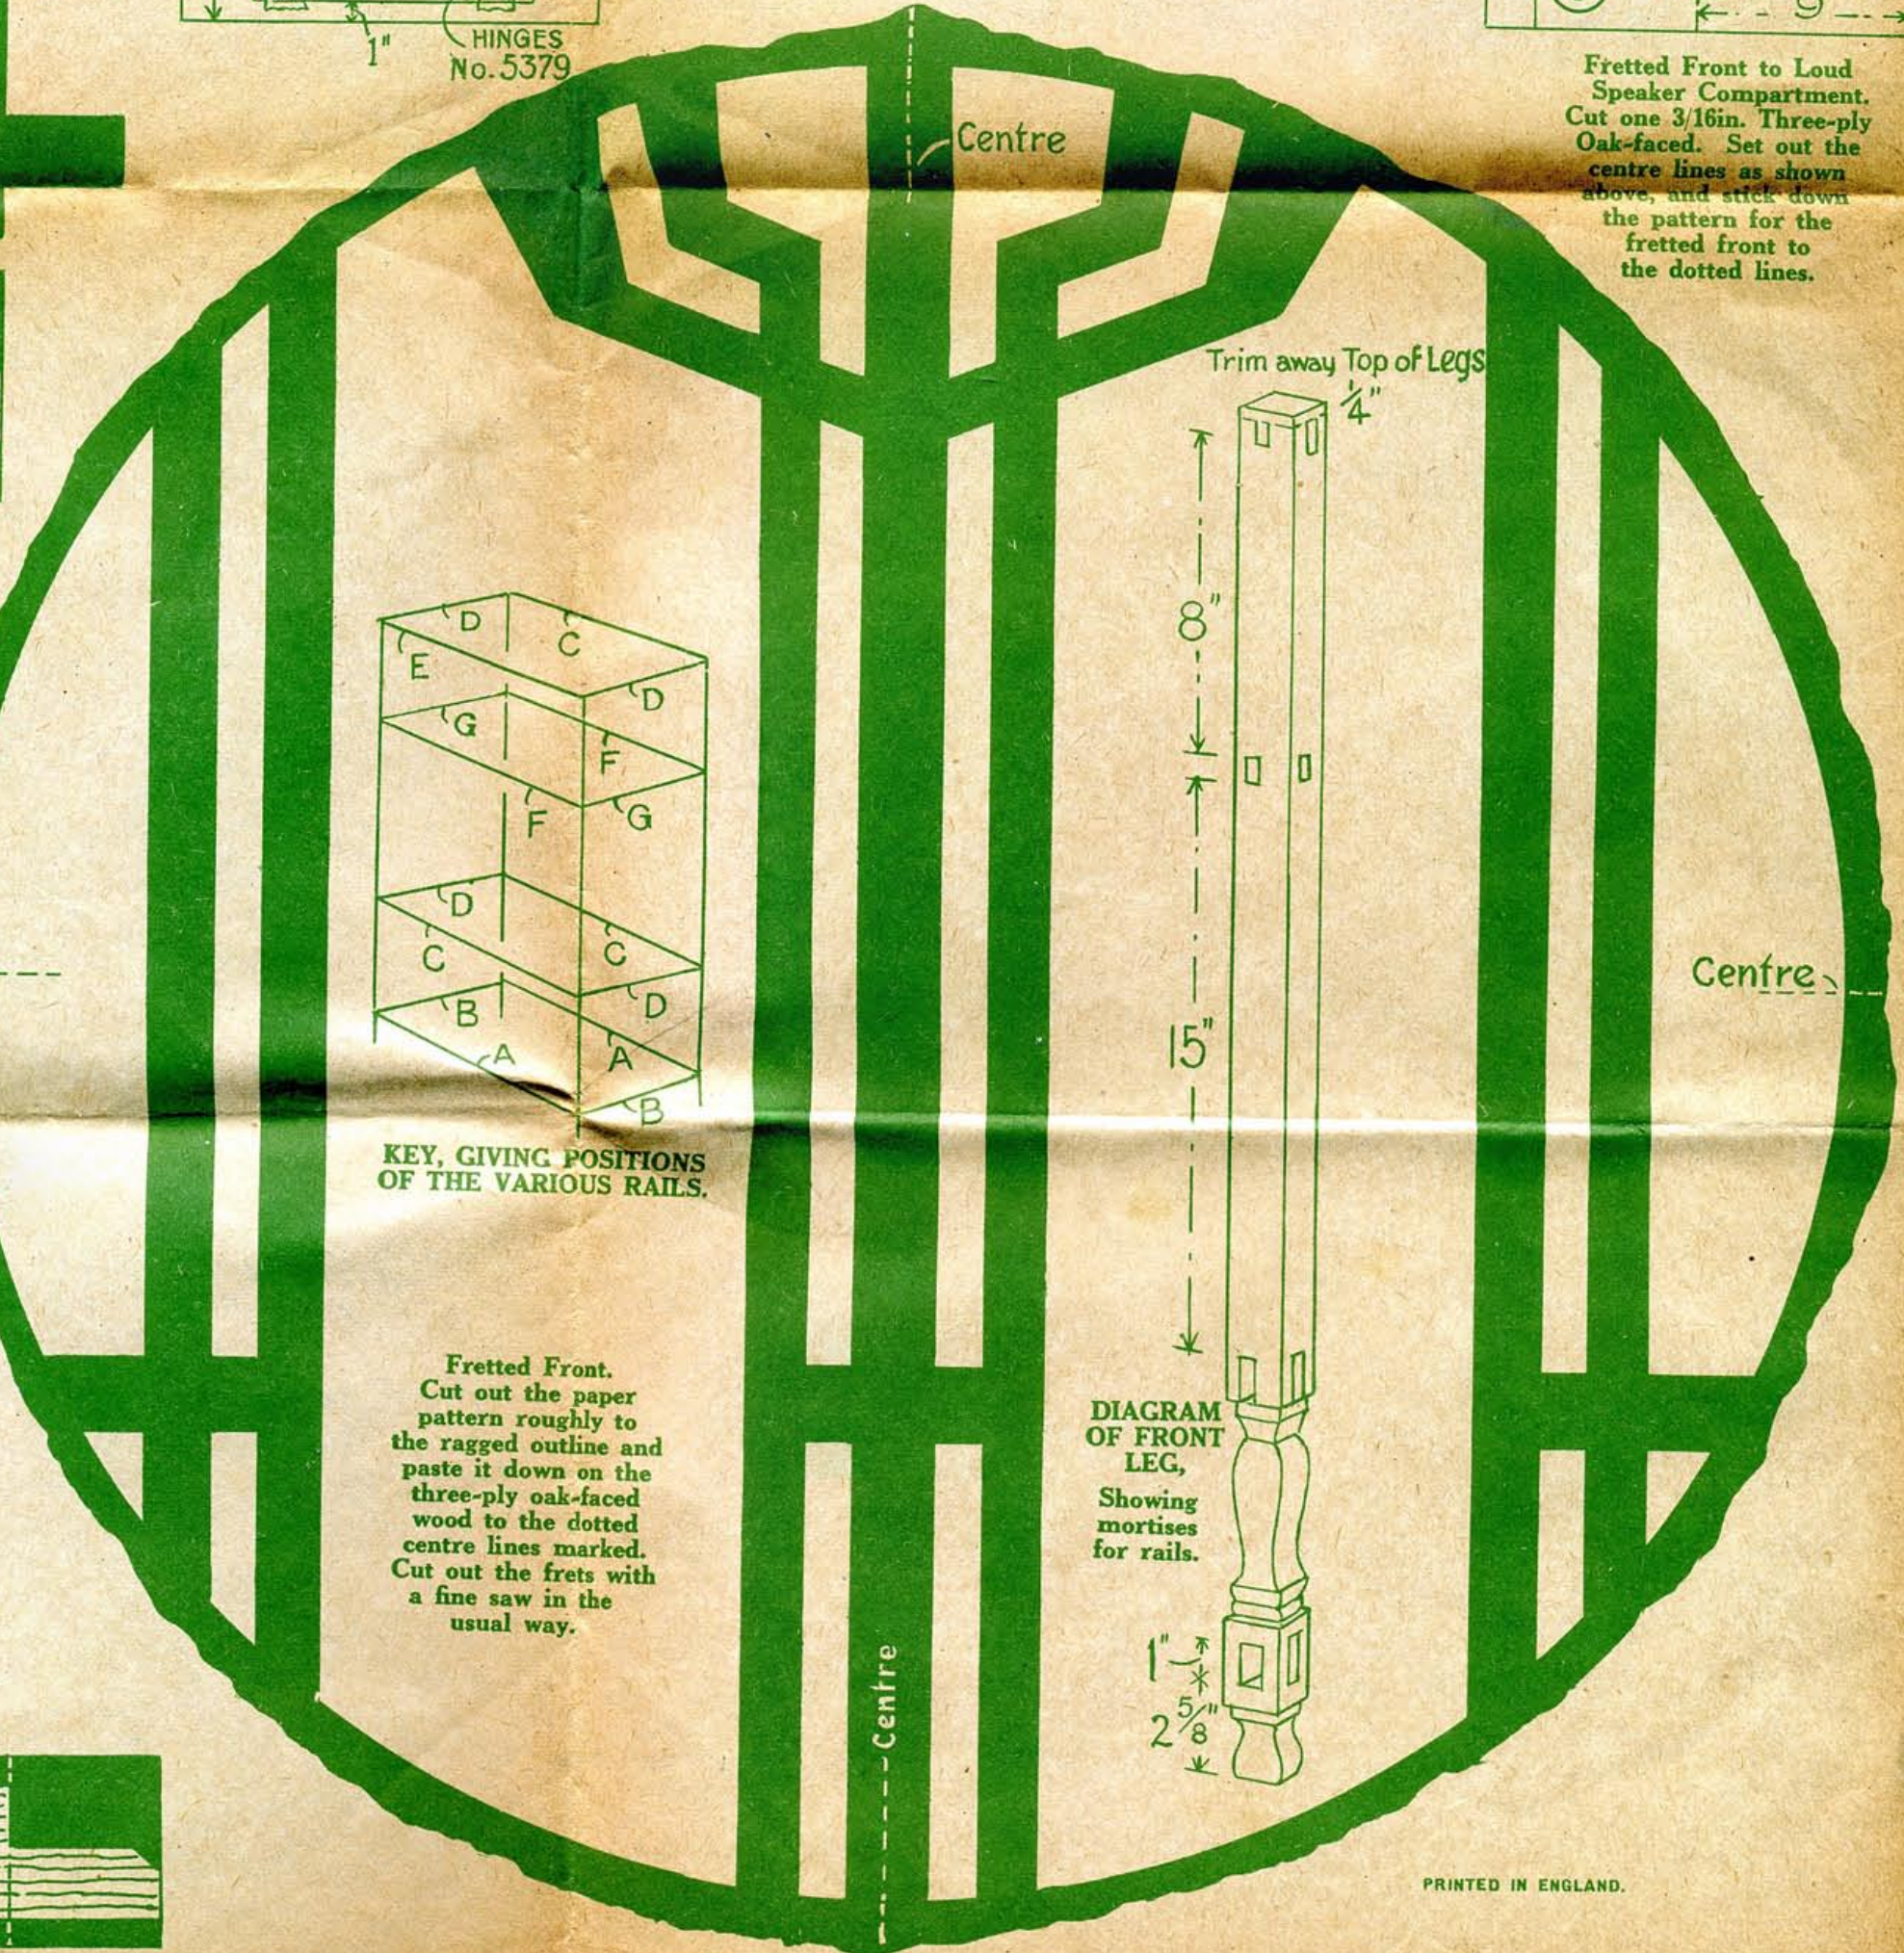

KEY, GIVING POSITIONS OF THE VARIOUS RAILS.

Fretted Front.
Cut out the paper pattern roughly to the ragged outline and paste it down on the three-ply oak-faced wood to the dotted centre lines marked. Cut out the frets with a fine saw in the usual way.

DIAGRAM OF FRONT LEG, Showing mortises for rails.